

Quick Merchant Operator Guide - IWL252 (Cordless)

IWL252 (Bluetooth CORDLESS) Terminal Features



Note:

The first three yellow option buttons will be used as the 'Cheque', 'Savings' and 'Credit' keys. The fourth soft key will not be used.

During Idle state, only the [Menu] and [Func] buttons are operable. Pressing either button will open the Main Functions Menu.

Key functions

Power ON/OFF

To **POWER ON**, simply place the terminal on its base (with the base's external power cable plugged in) and it will power up automatically. Alternatively, hold down the [OK] key while the terminal is off the base with a sufficiently charged battery. To **REBOOT**, hold down both the [FUNC] and [CLEAR] keys on the terminal at the same time. To **POWER OFF**, remove the terminal from its base and hold down both the [FUNC] and [CLEAR] keys at the same time.

Terminal Functions Menu

1. Press the [MENU] key
2. Press [1] to enter the EFTPOS menu
3. Press [2] to enter the TERMINAL menu
4. Press [4] to enter the PCEFTPOS menu

Status Bar

When the terminal is powered-on, the terminals' Operating System provides data to display the Status Bar as follows, and consisting of the information as described below.



Information	Indicator	Description
System Date and Time		This shows the current system time and date.
Security Status		This indicates that Ingetrust keys have been injected and that terminal data is secure.
Smart Base Indicator		This indicates that the terminal is paired with a smart base.
Power Condition		This indicates that the terminal is connected to mains power.
Battery Level		This is the charge level on the portable device and indicates whether or not the battery is currently charging.
Dial-up Modem Status		<p>This indicates that the internal (dial-up) modem on the base is configured but not enabled.</p> <p>This indicates that the internal (dial-up) modem on the base is enabled and connection established.</p> <p>While the modem is dialling, the Host number icon is coloured yellow, turning green and displaying 'PSTN' text when connection is made.</p>
Base Serial Number		This is the serial number of the base (cradle) to which the portable device is paired.
Bluetooth Icon		<p>This indicates the status of the Bluetooth link between the portable device and the base.</p> <p>Note: The manufacturer's recommended maximum operating distance for Bluetooth connectivity is 70m for indoor and up to 250m for outdoor/open space application.</p>
		This indicates that the terminal is within a 10 metre range and the Bluetooth link has been interrupted.
		When the terminal is more than 10 metres from its base, the Bluetooth link is broken, and only this icon will be displayed.
Contactless LEDs		The first LED, when continuously turned on (i.e. not flashing), indicates that contactless processing is enabled for the transaction. The rest of the LEDs are only turned on whilst the contactless transaction is being processed.

Purchase – Swipe and EMV with PIN/Signature

1. Initiate a purchase transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Swipe or insert the card
4. Select the account by pressing the function keys below the **CHQ, SAV, CR** text
5. Enter PIN or press **[OK]** for signature (Note: signature is only for credit transactions)
6. Wait for processing to be completed
7. Remove card when prompted by the terminal
8. Verify signature if it is a signature transaction. Press **[YES]** to approve or **[NO]** to decline
9. Transaction is approved and merchant copy of the receipt is printed
10. Press **[YES]** to print customer copy or **[NO]** to suppress

Purchase – Contactless (total purchase amount less than \$100)

1. Initiate a Purchase transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Tap card on the contactless reader once “Present Card” sign is displayed
4. Transaction is approved

Purchase - Contactless (total purchase amount above \$100)

1. Initiate a Purchase transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Tap card on the contactless reader once “Present Card” sign is displayed
4. Enter PIN and press **[OK]**
5. Transaction is approved

Note:

For contactless transactions, the merchant receipt will only be printed if a signature is required (based on the terminal and contactless card processing rules). A customer copy or a duplicate receipt may be printed on request.

Purchase – Manual Entry (Damaged Card)

1. Initiate a purchase transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Press **[Func]** on the keypad
4. Key in the card number on the keypad and press **[OK]**
5. Enter the card expiry date and press **[OK]**
6. Enter the CCV and press **[OK]**
7. Transaction type defaults to credit, press **[OK]**
8. Wait for processing to be completed
9. Verify signature on printed merchant receipt, press **[YES]** to approve or **[NO]** to decline
10. Transaction is approved and customer copy of receipt is printed

Purchase – Low Value Payment (LVP)

Note:

This function is only available to clients that provide certain types of goods or services. The merchant category codes allowed LVP are determined by the credit card schemes. Non-qualified merchants may apply for an exemption if they wish to offer LVP.

If the terminal is enabled, certain other conditions must then be met for the transaction to qualify for LVP processing including the transaction is a purchase transaction with no cash out; the card is present and is a Visa card, MasterCard card, or an AMEX card; the credit account is used; and the total transaction amount (including taxes) is less than or equal to the LVP limit.

1. Initiate a purchase transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Swipe or insert the card
4. Select credit account by pressing the function key below the CR text (**Note:** only transactions using the credit account will qualify for LVP processing. The terminal will not prompt for PIN after this screen.)
5. Wait for processing to be completed
6. Transaction is approved
7. Remove card when prompted

Note: For LVP transactions, a signature will not be required; hence, the merchant receipt will not be printed. A customer copy or a duplicate receipt may be printed on request.

Purchase with Cashout

1. Initiate a purchase with cashout transaction on the POS
2. If tipping enabled, enter tip and press **[OK]** or to bypass just press **[OK]**
3. Swipe or insert the card
4. Select the account by pressing the function keys below the **CHQ** or **SAV** text
5. Enter PIN and press **[OK]**
6. Wait for processing to be completed
7. Transaction is approved
8. Remove card when prompted

Cashout

1. Initiate a cashout transaction on the POS
2. Swipe or insert the card
3. Select the account by pressing the function keys below the **CHQ** or **SAV** text
4. Enter PIN and press **[OK]**
5. Wait for processing to be completed
6. Transaction is approved
7. Remove card when prompted

Tipping – On-Screen Tipping

1. Initiate transaction on the POS
2. Enter tip amount
3. Select the account by pressing the function key below the CHQ, SAV or CR
4. Enter PIN or press **[OK]** for signature
5. Merchant copy of the receipt is printed
6. Remove card when prompted by the terminal

Tipping – Contactless Tipping

1. Initiate transaction on the POS
2. Enter tip amount
3. Select the account by pressing the function key below the CHQ, SAV or CR

Refund

1. Initiate a refund transaction on the POS
 2. If prompted by the terminal, enter the operator password or the manager password and press **[OK]**
 3. Swipe, insert or tap the card
- Note:** Remainder of refund transaction flow is the same as that of a purchase transaction

MOTO (Mail Order / Telephone Order)

MOTO is the ability to process credit card transactions when the card is not present.

Note: MOTO processing functionality is not automatically available; it is enabled/disabled from CBA TMS, but must be supported by the POS.

1. Initiate a MOTO transaction (enter the complete card number, expiry date, and CCV) on the POS
2. Transaction type defaults to Credit, press **[OK]**
3. Wait for processing to be completed
4. Transaction is approved

How to obtain a duplicate receipt

This request is actioned from the POS. Allows you to reprint the last completed transaction, showing all details of the transaction including whether the transaction was approved.

Changing passwords

1. Press **[Func]**
2. Select Option 2 – Terminal
3. Enter the Manager Password
4. Select Option 2 – Passwords
5. Select Option 1 – MANAGER to set the Manager Password or Option 2 – OPERATOR to set the Operator Password
6. Enter the password and press **[OK]**. Repeat to confirm the new password.

Setting the manager refund limit

1. Press [Func]
2. Select Option 1 – EFTPOS
3. Enter the Manager Password
4. Select Option 3 – Special Functions
5. Select Option 1 – Refund Limit
6. Select Option 1 – Operator to set the Operator Refund Limit or Option 2 – Manager to set the Manager Refund Limit

Settlement – Manual Settlement

1. Initiate settlement on the POS
2. Wait for processing to be completed
3. Settlement report is printed

Note: The terminal can also typically be set via the POS to automatically settle every day at a particular time. Auto-Settlement cannot occur between 22:00 and 0:00 AEST.

Pre-Settlement / Cumulative Totals

Pre-Settlement / Cumulative Totals indicate the amount transacted through the terminal since the last reconciliation was processed.

1. Initiate pre-settlement on the POS
2. Wait for processing to be completed
3. Pre-settlement report is printed

Shift Totals Request

Shift Totals indicate the amount transacted through the terminal since the last shift totals request was processed.

1. Initiate settlement on the POS
2. Wait for processing to be completed
3. Shift Totals report is printed

Settlement – Multiple Merchant

When settlement is initiated, the host will effect settlement of all the multiple merchant accounts and the generic account, but the terminal will not produce a Settlement report for individual multiple merchants. The settlement, previous settlement and cumulative totals reports will show the host grand totals (bank totals). See Settlement/ Pre Settlement / Last Settlement Report for details of these reports.

Multiple Merchant Selection

Multiple merchant selection will occur for purchase, cash out, refund and completion transactions when the multiple merchant function is selected on the POS before the transaction is sent to the PINpad.

When the multiple merchant facility is enabled on the terminal, the terminal will store the multiple merchant details with the transaction details and display the multiple merchant name or number on the Financial receipt.

Store and Forward (SAF)

Store and Forward (SAF) is the ability to process offline transactions.

The PINpad will display 'SAF' in the top right hand corner of the screen to indicate that there are one or more entries in the store and forward memory of the terminal.

'Settlement Sending Stored Transactions' is displayed if a settlement is triggered and there are SAF entries that need to be forwarded to the Bank.

'Sending Stored Transactions' is displayed when a stored transaction is sent online after the idle timer has been triggered or the cumulative totals report has been requested.

When a transaction that exceeds your floor limit is performed in the SAF mode, an authorisation number will need to be obtained by calling the authorisation centre.

Common Terminal Error Messages

Codes	Terminal Display	Description	Recommended Next Steps
01	DECLINED – 01 CONTACT CARD ISSUER	Refer to card issuer	Advise the cardholder to contact their card issuer for specific details. Ask the Customer for another form of payment (e.g. different card).
13	DECLINED – 13 INVALID AMOUNT	Invalid amount	Different limits apply to different types of transactions as defined in the merchant agreement. For instance, there is a cashout limit and a refund limit, and if either one is exceeded, an error message will be displayed. The user must simply enter a value lower than the relevant limit defined in the agreement.
IE	DECLINED – IE LOW BATTERY	Insufficient battery level to process transaction	Place terminal/PINpad back on its base and re-initiate transaction on POS.
X0	DECLINED – X0	No response from host	Check communications link. Try processing the transaction again. If still no response, invoke SAF.
S0	DECLINED - S0 MODEM ERROR	Modem error	This can represent an error with an external modem, or if the terminal is set to fallback to internal modem and no phone line has been plugged in. Check communications link on base and wall plug. Ensure cables are properly connected.

Codes	Terminal Display	Description	Recommended Next Steps
S2	DECLINED – S2 NO ANSWER	No answer	Contact the CBA Merchant Helpdesk.
S8	DECLINED – S8 NO EFT SERVER	Link not setup on EFT Server	Contact the CBA Merchant Helpdesk.
57	DECLINED – 57 TRAN NOT ALLOWED	Transaction not permitted to cardholder	Advise the cardholder to contact their card issuer for specific details. Ask the Customer for another form of payment (e.g. different card).

Charging the Battery

When does the battery need to be charged?

- ◆ On initial start-up, keep the terminal on its base for 16 hours to fully charge the battery.
- ◆ The terminal recharges its batteries each time it is placed on its base. Charging is automatic.
- ◆ It is recommended that the **terminal be kept on its base when not in use**, and placed back on its base after a transaction is performed.



How can the battery be charged?

- ◆ Using the base
 - Place the terminal on its base
 - Check if the battery symbol is flashing or moving (= battery charging)

NOTE: If the base is powered off for any reason, please re-connect the base to the power source, place the terminal back on the base, and then reboot the terminal. To reboot the device press **[FUNC]** and **[CLEAR]** keys together.

Training Mode instructions

1. User enables training mode on the POS and initiates a purchase transaction

Note: Only financial transactions can be performed whilst in training mode. Training mode can also only be enabled when the terminal is in a ready state and when there are no reversal or advices pending.
2. Card is swiped, tapped or inserted
3. Wait for processing “Training Mode” to be completed
4. Cardholder selects their account type (if applicable)
5. Wait for transaction to be processed. A delay of 2 seconds is added at this stage to simulate the bank response.
6. The final response is displayed based on the cents received in the total amount of the POS request. For example: ‘APPROVED’ would appear when ‘00’ is passed in the cents field. ‘SIGNATURE REQUIRED’ would appear when ‘08’ is passed in the cents field.

Note: All transactions processed in training mode will have the following printed on the receipt in place of the Merchant Name and Address:

**** TRAINING ONLY ****
NOT A VALID TRANSACTION

Support

For support, please call the dedicated CBA merchant helpdesk on **1800 022 966**, 24 hours a day, 7 days a week.

When calling the Helpdesk, please make sure you have the following information ready:

- ◆ Terminal ID (located at the top of your merchant receipt)
- ◆ Trading name
- ◆ Trading address
- ◆ Trading phone number.

For authorisations on all over floor limit manual debit card transactions, please call **1800 813 700**.

For authorisations on all over floor limit manual credit card transactions, please call **13 26 36**.

For stationery orders please visit <https://eftposstationery.evoveshop.com.au> or call **1800 230 177**.

For more information on EFTPOS Integrated terminals and other CBA merchant services, please visit <http://www.commbank.com.au/business/merchant-services/default.aspx>